


METRIM



SHADOWLINE

THE NEW ALTERNATIVE TO TRADITIONAL ARCHITRAVES

Clean architectural shadowline detailing for tile and plasterboard applications

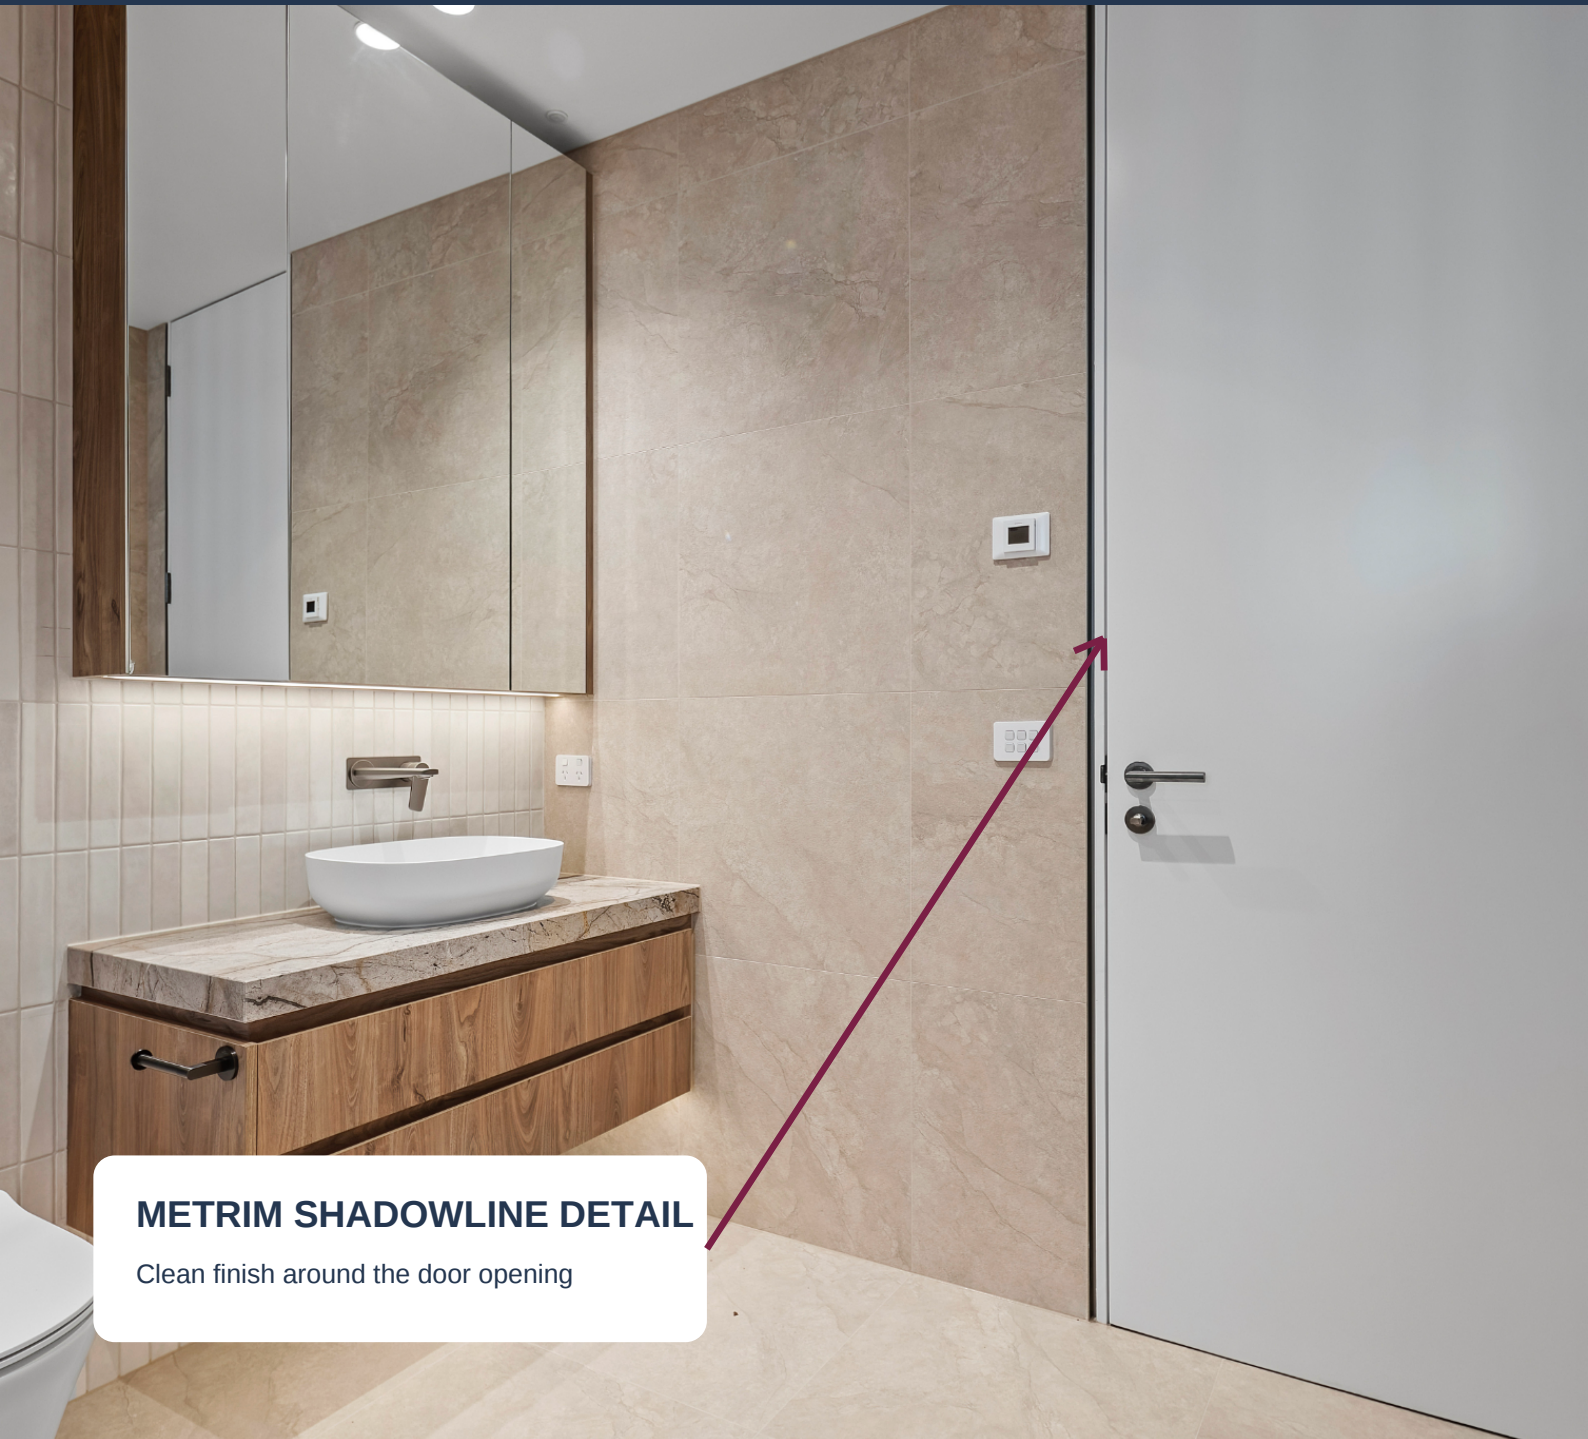

METRIM SHADOWLINE DETAIL

Clean finish around the door opening

FEATURED PROJECT: ANDERSON HOMES

www.metrim.com.au | 1800 962 263

A clean architectural finish for residential and commercial projects.

Modern shadowline detailing, made simple.

METRIM Shadowline replaces traditional architraves around doors and windows, creating a streamlined architectural finish for tile and plasterboard applications. Designed for straightforward installation, it delivers a refined result in renovations and new builds.

Key benefits of METRIM Shadowline:

- Clean, modern architectural shadowline finish
- No bulky traditional architraves
- No visible adhesive along tile edges
- One-trade installation - by either the tiler or carpenter
- Reduces trade coordination and saves valuable time on site
- Suitable for wet and dry area applications
- Available in 24 colours matched to the ARDEX grout range
- Simple installation using standard tools
- Proudly Australian made and owned

Get the streamline look.

See before and after:



Australian-made with sustainable aluminium, ME TRIM offers style, durability, and ease of installation. **Great for renovations or new builds.**



Go right up to the edge,
create a striking shadow line.

How it works.

Effortlessly Install Tile Trim in a Few Simple Steps.


Preparation: Ensure proper gaps around your door or window frame.

Measure and Mark: Measure your frame and mark the trim accurately.

Cut: Use a drop saw to cut the trim precisely at the required angles.

Secure: Place the trim in the gap and secure it with screws and optional adhesive.

Tile: Tile over the trim, either applying grout directly or tiling up to the trim's edge for a seamless finish. With these easy steps, you can achieve a professional and polished look effortlessly.

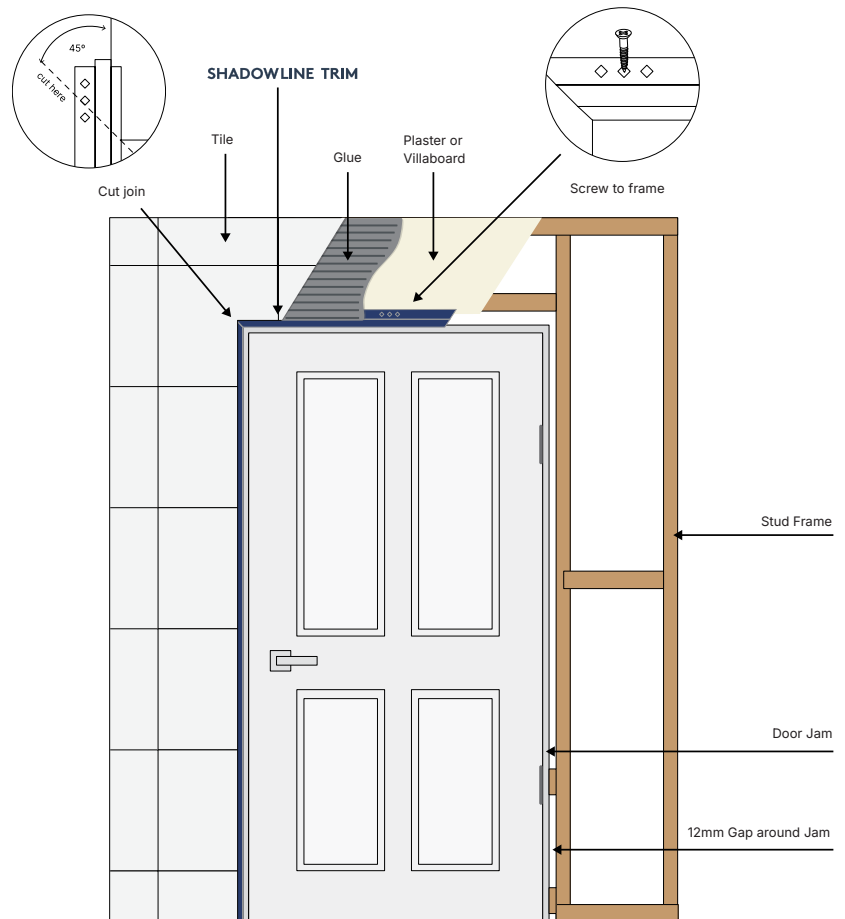


Flush Install

WIDER JAMBS 140MM

This method ensures that the trim sits level with the wall surface, creating a seamless and modern look.

It's ideal for those aiming for a minimalist appearance, where the trim blends effortlessly with the surrounding surfaces, emphasising the clean lines of the design.

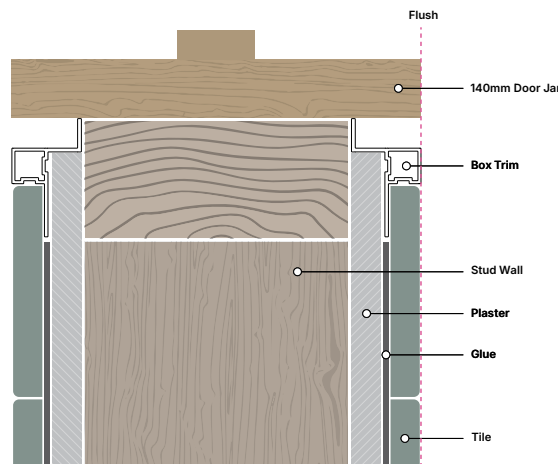

Stepped Install

STANDARD JAMBS 110MM OR 120MM

In contrast, a stepped installation allows the trim to stand proud of the surface, adding a layer of depth and texture to the space.

This approach is particularly effective in renovations where you want to use existing jambs.

